

## B. Model 123.1 T-sedans

### Removal

---



- 1 Remove spare wheel covering and spare wheel.

Slightly raise spare wheel covering during removal until pins (arrows) disengage.

- 2 Unscrew screw (2) of lateral lining.

- 3 Loosen hose clamps (arrows) on vent lines and pull off hoses, tightly close lines and hoses.

- 4 Unscrew screws (1) of expansion tank (55). For this purpose, slightly raise lateral and wheel house paneling for removing front screw seen in driving direction. Remove expansion tank.

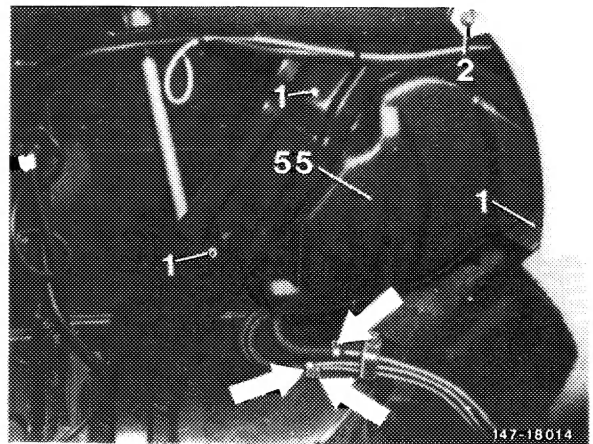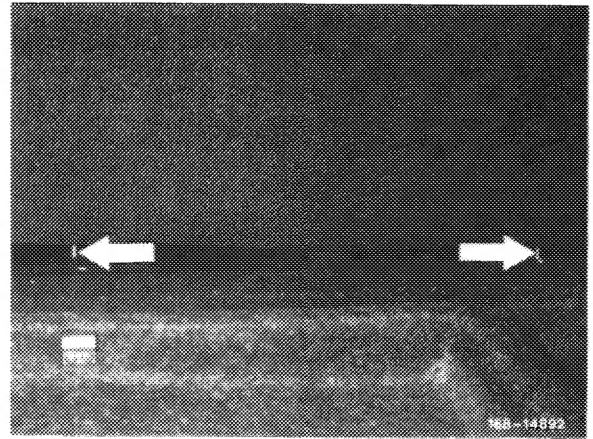

### Installation

---

- 5 For installation proceed vice versa.

**Note:** Check hose connections for leaks.